

## FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



**TIGER**  
ELECTRONICS

© 2009 Hasbro. All Rights Reserved. TM & ® denote U.S. Trademarks.



### NOTE TO UK CONSUMERS:

This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of in your household waste bin.

Product and colors may vary.



 
VISIT  
[HASBRO.COM/IDOG](http://HASBRO.COM/IDOG)

Questions? Call 1-800-844-3733

786000800 Asst. PN 6949650000

AGES 8+

USER'S GUIDE

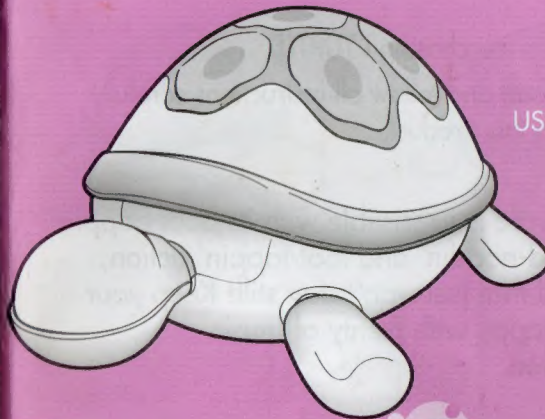

**i-turtle™**

Little shell, big sound

Thank you for purchasing I-TURTLE.

Be sure to read and follow all instructions carefully before using this product.

This little turtle is irresistible with its beat-boppin' lights, head-noddin' and foot-tappin' action, and a shell that just won't stay still! Keep your I-TURTLE happy with plenty of music and attention.

**x3**

### BATTERIES INCLUDED

 
 
1.5VAAA  
LR03 size

Replace with 3 x 1.5V "AAA" or LR03 size alkaline batteries. Phillips/cross head screwdriver (not included) needed to replace batteries.

POWERED BY

**POWER FUEL**


## GETTING TO KNOW I-TURTLE

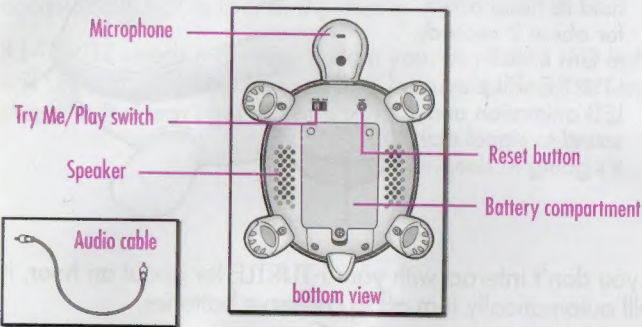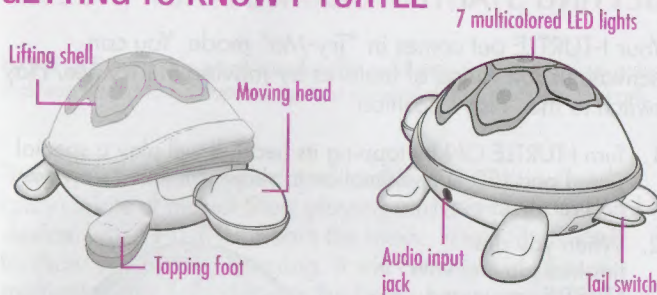

## GETTING STARTED

Your I-TURTLE pet comes in "Try-Me" mode. You can activate its full range of features by moving the Try Me/Play switch to the "Play" position.

 1. Turn I-TURTLE **ON** by tapping its head. It will play a special sound and LED light animation to show you that it's awake and ready to play!
2. When you are finished playing with I-TURTLE, press and hold its head down for about 2 seconds to turn it **OFF**. I-TURTLE will play an LED animation and sound to signal that it's going to sleep.

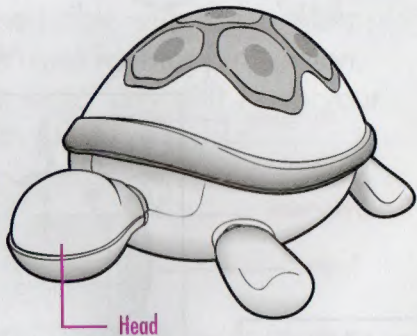

If you don't interact with your I-TURTLE for about an hour, it will automatically turn off to conserve batteries.

## "FEED" I-TURTLE MUSIC

**NOTE:** I-TURTLE is a great speaker for your personal music device, but it doesn't need to be hooked up to a musical device in order to work.


To keep I-TURTLE satisfied and healthy, be sure to "feed" (play) it lots of music! Start playing music on your musical device; when I-TURTLE hears the music, it will lift its shell to show you that it's listening. It will also start to play a multicolor LED light show to the beat of your music and will occasionally tap its foot to the music.

If I-TURTLE needs more music from you, its middle LED light will blink blue. When you see this, be sure to "feed" it some music so it doesn't get too hungry!



## Hooking Up I-TURTLE to a Musical Device

 1. Plug one end of the audio cable into the side of I-TURTLE.
2. Plug the other end of the audio cable into the headphone jack of a musical device (CD player, stereo, portable personal music player, computer, video game system, etc. — all not included).

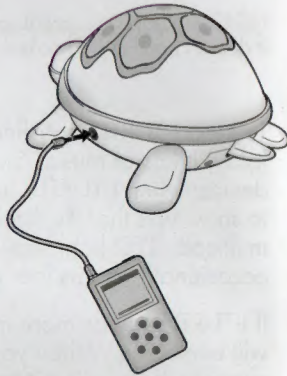


### Tail mute switch:

When you are using I-TURTLE as a speaker for music, its tail functions as a mute button and using it does not make I-TURTLE angry. Press the tail once to mute; press tail again to resume playing your music. If I-TURTLE senses your music has stopped, it will come out of "mute" mode automatically.

## "Feeding" I-TURTLE Without Being Connected to a Musical Device

 
I-TURTLE can also listen to music through its built-in microphone. Make sure the audio cable is disconnected, then simply place I-TURTLE near a speaker, where the volume is at a higher level, and watch it react!

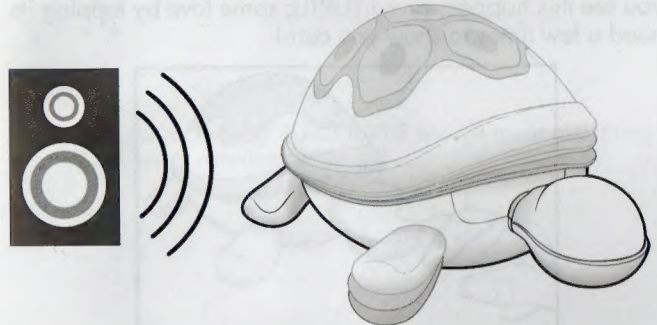

## GIVE I-TURTLE LOTS OF LOVE

To keep I-TURTLE happy, be sure to give it plenty of love and attention. You can do this by tapping its head; it will respond with a happy sound and warm glowing LED light patterns. Double-tap its head to hear a musical riff and see a light pattern that represent what mood I-TURTLE is in.

 If I-TURTLE needs more love or attention from you, its 6 outer-ring LEDs will flash orange-yellow-orange-yellow. The more love it needs, the faster the lights will flash. When you see this happen, give I-TURTLE some love by tapping its head a few times to show you care!

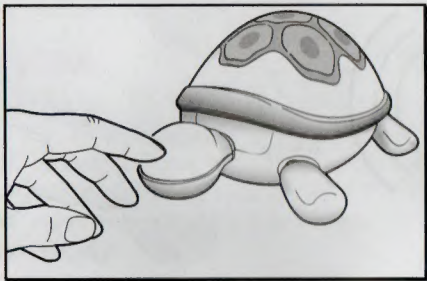

## MOODS

I-TURTLE changes its moods based on how much music and attention you give it (or don't give it). To see what mood I-TURTLE is in, double-tap its head and pay attention to the music and light patterns it displays.

### EXCITED

This means you're "feeding" your I-TURTLE lots of music and giving it a lot of attention.



NOTE - This light sequence moves quickly

### HAPPY

This means you're "feeding" your I-TURTLE enough music and giving it the right amount of attention.



## NORMAL

This means your I-TURTLE is content. It hasn't been getting as much music or attention, but it's doing OK.



## SAD

This means you've left your I-TURTLE alone for too long. Cheer it up by tapping its head and playing it some happy music.



## "SICK"

When you see your I-TURTLE displaying a green and yellow light pattern and it doesn't play a musical riff, this means it's feeling "sick" (it really hasn't been getting enough music or attention). The best cure for this tortoise's troubles is a dose of attention (tap its head) and a shot of your music!



## TURNING OFF MOTOR MOVEMENT

If you don't want I-TURTLE to move or make motor sounds while it's playing your music, you can turn the motor sound off:

1. Play some music until I-TURTLE responds with light patterns.
2. Tap its tail switch and head at the same time.

To turn motor movements back on, just press its head and tail switch at the same time again. I-TURTLE will also automatically turn motor movements back on if you stop playing music.



## IMPORTANT TIPS

1. If I-TURTLE is constantly begging for music or attention, you can tap its tail switch for 5 minutes of peace and quiet. But beware! I-TURTLE will get angry when you do this. If you want to take I-TURTLE out of "quiet mode" before the 5 minutes are up, tap its head.
2. If you will not be playing with I-TURTLE for a while, please remember to press and hold down its head for at least 2 seconds to turn it OFF. This will help conserve battery life.
3. If you do not interact with I-TURTLE for a while, it will automatically shut off to conserve battery life.
4. I-TURTLE may react to other sounds or noises that it hears, other than music.

## TROUBLESHOOTING

 
What to do if:

**I-TURTLE Freezes Up**

Press the Reset Button using a pen tip.

**I-TURTLE Begins Acting Erratically**


Change the batteries.

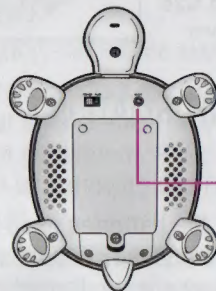

Reset button

## TO REPLACE BATTERIES

 Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment cover (screw remains attached to cover) on the center of his tummy. Remove cover. Remove and discard old batteries. Replace with 3 x 1.5V "AAA" or LR03 size alkaline batteries. Replace cover and tighten screw.

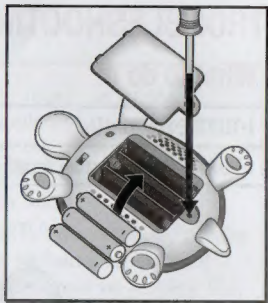

## IMPORTANT: BATTERY INFORMATION



### CAUTION:

1. As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect. If you reside outside the United States, have the doctor call your local poison control center.

2. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
3. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
4. Remove exhausted or dead batteries from the product.
5. Remove batteries if product is not to be played with for a long time.
6. Do not short-circuit the supply terminals.
7. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
8. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.